



MINI HANDHELD MEGAPHONE

USER MANUAL



Model: KN-HMGP01

Please read all instructions before use for best performance of this product.
Save these instructions for future reference.

WELCOME!

Dear Knox Gear customer,

Congratulations on your purchase of the Knox Gear Mini Handheld Megaphone. Thank you for your support. With normal use and proper treatment, it will provide you with years of reliable service. Please read this manual carefully before using this product, and keep it in a safe place for future reference.

We hope you enjoy your new Knox Gear Mini Handheld Megaphone. For technical assistance and warranty service, please email us at **cs@knoxgear.com**.

PARTS AND FUNCTIONS

1. Speaker: Converts the electrical signal into sound.
2. Condenser Microphone: Converts the output into electrical sound.
3. Volume (VOL) Controller: Adjusts the output volume.
4. Power Switch: Activates the megaphone.
5. Handle Grip: Allows for easy gripping.
6. Shoulder Strap: Allows for carrying on shoulder or in hands.
7. Battery Compartment: Loads 6 AA batteries (not included).
8. Battery Lid: Open to access battery compartment.
9. Function Switch: Used to switch between functions (microphone will be off when signal function is on).
 - S: Siren Function
 - F: Foghorn Function
 - M: Microphone Function
 - W: Whistle Function



OPERATION INSTRUCTIONS

1. Power Source:

- Power: Load 6 AA batteries into the battery compartment and close.
- Be sure that batteries are well loaded and that the lid is fastened securely.

2. How to Use the Megaphone:

- Adjust the function switch to the "M" position.
- Press the trigger and speak into the microphone (adjust volume accordingly).
- The closer you speak into the microphone, the louder the sound will be.
- Decrease the volume if there is feedback.

3. How to Activate the Functions:

- Adjust the function knob to the required position and press the trigger.

TROUBLESHOOTING

If the Knox Gear Mini Handheld Megaphone is not working:

- a. Check that the batteries have power and are loaded correctly.
- b. Check that the battery lid is fastened securely into place.

SPECIFICATIONS

- Rated Output Power: 1.8W
- Power Source: 6 x AA battery (not included)
- Battery Life: Approximately 6 hours
- Cartridge: Condenser cartridge
 - Sensitivity: $-58\pm 3\text{dB}$
 - Impedance: $2.2\text{k}\Omega$
- Dimensions: $\text{Ø}5.9'' \times \text{L}11.7'' / \text{Ø}150\text{mm} \times \text{L}298\text{mm}$
- Weight: 1.3lb / 0.6kg (without batteries)

CAUTION

1. Do not place under direct sunlight or near high temperatures.
2. Do not expose to wet or damp environments.
3. Do not use the megaphone in close proximity of ears. This may cause hearing damage.
4. Remove batteries prior to storing the megaphone for an extended period of time, as storing with batteries may cause circuit damage.
5. Do not use products containing benzene when cleaning the megaphone.

